



Molly&Cody

# Pet Water Fountain



Molly&Cody



## User Guide

Modell: WF040

## Contents

---

Package List	1
Intended Use	1
Before First Use	2
Product Parameters	2
Product Introduction	2
Use Instructions	3
Submersible Pump Cleaning Method	4
Operation	5
Cleaning and Maintenance	5-6
Cleaning cycle	6
Cleaning the product	6
Storage	6
Questions & Answers	7
Important Safeguards	7-8

## Package List

Before getting started, ensure the package contains the following



1\* Water fountain storage tank



1\* filter tank + 2\* filter cotton +  
1\* filter element



1\*water pump



1\*instruction(optional)

## Intended Use

- This product is intended to be used as a water source for pets. This product is suitable for household use only. It is not suitable for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damage(s) resulting from improper use or non-compliance with these instructions.

## Before First Use

- Carefully remove all packaging materials and retain for future use. Check for transport damages.
- Clean the product. Take out the filter element, clean it under running water, and soak it for ten minutes (a little activated carbon powder is normal). Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the rating label.

**DANGER** Risk of suffocation! Keep any packaging materials away from children-these materials are a potential source of danger, e. g. suffocation

## Product Parameters

Product Name: PET WATER FOUNTAIN

Product Model: WF040

Color: white

Product material:ABS + STAINLESS STEEL

Capacity: 2.0L

Voltage/current: 5V/100MA

Weight: 0.65 KG

Filter material: sponge + resin + activated carbon

Dimensions(L\*W\*H):170\*180\*135mm

## Product Introduction

- The faucet
- Stainless steel water storage tray
- The filter cotton
- The filter element
- The Filter tank
- The filter cotton
- The water pump
- Storage tank



## Use Instructions:

1. Take out a piece of filter and soak it in normal temperature water for 10 minutes before use. This will be better more for filtration, This step is required every time you use a new filter. ( it is normal that some small amount of black powder and particles attached to the filter.)



2. Install the water pump at the bottom of the filter tank and fasten the bottom cover of the water pump.



3. Put the 8D cotton in the bottom of the filter tank, and put the white filter element in the upper square tank first, and then put the blue cotton on top;



4. Place the filter tank in the water storage tank, and the USB cable of the water pump can be threaded out of the gap on the back of the water storage tank;



5. Add water to the water storage tank until the red buoy in the window reaches the MAX water level and then stop adding water;



6. Insert the transparent sprinkler head into the top cover and filter slot and insert it firmly;



7. Pay attention to observe the buoy water level in the window. When the buoy is at the MIN lowest water level, it is necessary to add water to MAX in time.

## Submersible Pump Cleaning Method



1. The overall structure of the pump.



2. Use your nails to enter the water panel and pull it out.



3. Take out the cover inside the motor cavity.



4. Use the tweezers or scissors to take out the rotor inside the motor cavity, and clean all parts.



## Operation

---

Turning the product on/off

### WARNING

Risk of electric shock! Always unplug the product when not in use.

### CAUTION

Risk of damage! Do not turn on the product with an empty water container.

- Place the product on a stable, flat, water-resistant ground.
- To turn on the product, plug the power adapter into an appropriate mains socket.
- To turn off, unplug the power adapter from the mains socket.
- Do not add hot water

## Cleaning and Maintenance

---

### WARNING

Risk of electric shock! During cleaning do not immerse the power adapter in water or other liquids. Never hold the power adapter under running water.

### WARNING

Risk of electric shock! Always unplug the product when not in use, before putting on or taking off parts, and before cleaning.

### CAUTION

Risk of electric shock! Never use corrosive detergents, wire brushes, abrasive materials or sharp utensils to clean the product.

### CAUTION

Risk of deformation! Dishwasher is not recommended.

### CAUTION

Risk of illness! Please wash it directly under running water and do not use soap or other detergent. Detergent residue may hurt your pet's health.

## Cleaning cycle

---

- Clean the water container and accessories before first use.
- Cleaning the pump is essential to the longevity of the fountain.  
Please clean the pump at least every 2 weeks.
- Clean the water container every two weeks, increasing the frequency according to the animal's habits and the quality of the water.
- Clean every new (first use) filter under running water and soak it for 10 minutes.
- Clean the filter once a week. Replace the filter every month. Increase frequency when multiple animals shared.

## Cleaning the product

---

- Rinse all parts, except the power adapter
- Dry the product after cleaning.

## Storage

---

- Store in a cool and dry place away from children and pets
- Avoid any vibrations and shocks

## Questions & Answers

---

Q: What if the product does not work and there is no water come out?

A: Please check if the water in the water container reaches the minimum water level.

Q: The water container has water, it is connected normally, but no water is pumped out?

A: Please check if the adapter plug is damaged. If you still can't resolve the problem by replacing the adapter, please contact customer service.

Q: Why is the pump noisy after using for a while?

A: Please check if the water level of the pet water fountain is higher than the pump.

Because if the water level is lower than the pump, the pump may make noise.

Please add water to the position above the pump to solve this problem.

- Do not use outdoors. For indoor use only.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord
- Do not operate any product with a damaged cord or plug, or after the product malfunctions or is dropped or damaged in any manner. Immediately call your country's customer care center for further instructions.
- To reduce the risk of electrical shock, do not place or store the power adapter nearby a tub or sink.
- Always unplug any product when not in use before putting on or taking off parts.  
and before cleaning.
- Please protect your pet from chewing power cords.

## SAVE THESE INSTRUCTIONS

## Important Safeguards

---

Please read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions manual must be included

When using electrical products, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Only use accessories recommended or sold by the manufacturer

## Certifications

### European Union Compliance Statement Battery recycling information for the European Union



Batteries or packaging for batteries are labeled in accordance with European Directive 2006/66/EC and amendment 2013/56/EU concerning batteries and accumulators and waste batteries and accumulators. The Directive determine the framework for the return and recycling of used batteries and accumulators as applicable throughout the European Union. This label is applied to various batteries to indicate that the battery is not to be thrown away, but rather reclaimed upon end of life per this Directive.

In accordance with the European Directive 2006/66/EC and amendment 2013/56/EU, batteries and accumulators are labeled to indicate that they are to be collected separately and recycled at end of life. The label on the battery may include a chemical symbol for the metal concerned in the battery (Pb for lead, Hg for mercury, and Cd for cadmium).

Users of batteries and accumulators must not dispose of batteries and accumulators as unsorted municipal waste, but use the collection framework available to customers for the return, recycling, and treatment of batteries and accumulators. Customer participation is important to minimize any potential effects of batteries and accumulators on the environment and human health due to the potential presence of hazardous substances.

Before placing electrical and electronic equipment (EEE) in the waste collection stream or in waste collection facilities the end user of equipment containing batteries and/or accumulators must remove those batteries and accumulators for separate collection.

### Waste Electrical and Electronic Equipment (WEEE) Directive



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection

## Certifications

point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points

### Restriction of Hazardous Substances Directive (RoHS)

Beijing Junqi Technology Co., Ltd product, with Included parts (cables, cords, and so on) meets the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment ( "RoHS recast" or "RoHS 2")

### Radio and Telecommunications Terminal Equipment Directive



We, Beijing Junqi Technology Co., Ltd, hereby declare that this device corresponds to the basic requirements and relevant regulations outlined in guidelines 2014/53/EU, 2011/65/EU, 2014/30/EU, 2014/35/EU and 2009/125/EC.



### Disposal

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.